

Be Green. Run Clean.

CURVE

Burn Calories. Not Electricity.

The Fitness Innovation of 2011!

The WOODWAY® **CURVE** is an all green, non-motorized treadmill that lets members burn their calories, not your electricity!

- Driven by human energy
- 100% eco-friendly
- Zero electricity consumption
- No recurring costs
- Joint-protecting slat-belt technology and curved design




The WOODWAY® CURVE allows any user, regardless of size or weight, to instantly achieve the speed they desire without the use of elevation or a motor!

The CURVE's sophisticated design is the culmination of years of non-motorized design and development by WOODWAY. The key ingredient is WOODWAY's patented running surface and near-frictionless drive system, which allows the running belt to move freely.

Totally Green Treadmill - HUMAN POWER!

The user controls speed via body positioning along the curved running surface. Stepping forward initiates movement, and speed increases as the user moves forward up the curve. To slow, simply drift back towards the rear of the curve.

Dimensions

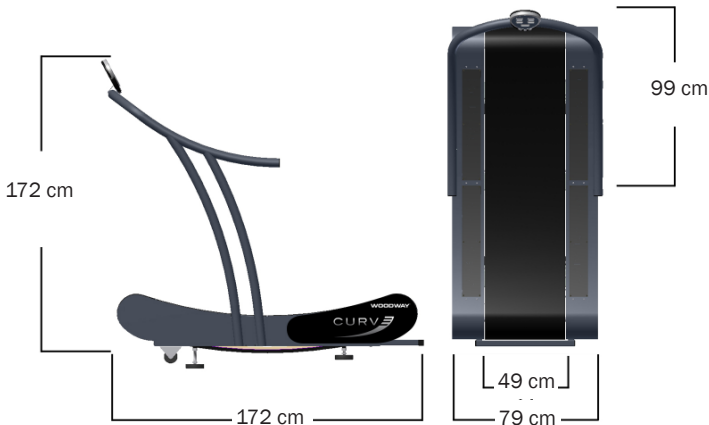

Physical Specifications

Belt Type	60 individual slats
Drive System	114 precision ball bearings with 12 roller guides (4 mm lateral tolerance)
Running Surface	Vulcanized rubber (38-43 shore hardness)
Drive Motor	Human Power
Unit Weight	190 kg
Power Supply	Does not require power

Performance Specifications

User Weight Capacity	Running 225 kg Walking 350 kg
Running Surface Area	(L) x (B) 157 cm x 43 cm
Speed Range	No maximum speed
Elevation Range	Innovative curved design
Standard Fitness Warranty	10 year frame 5 year functionality of the running surface 3 year all non-friction components 2 year on battery operated display 1 year labor and all other components

Note:
The above mentioned guarantee is only valid if an annual service has been carried out by an authorized WOODWAY Service Technician



Ultimate Treadmill For Serious Running

- Users are not subject to ramp up / down speeds
- Attain full sprint in a few explosive steps
- Sports specific work to rest interval training
- No maximum speed

LCD Window Display



Five seven-segment displays show program statistics (SPEED, DISTANCE, CALORIES, PULSE and TIME). The four-digit displays are programmed in an 88:88 format. Three function buttons set, toggle and display data.

For more information contact your nearest WOODWAY representative: